


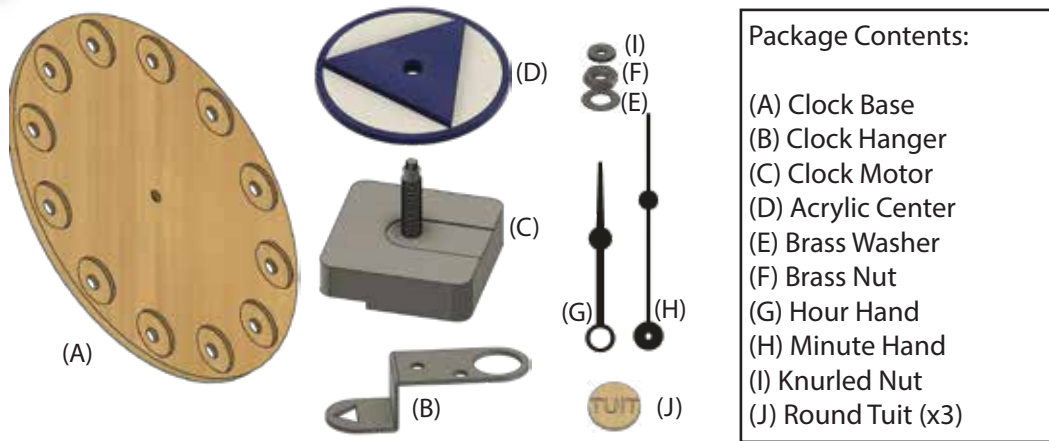



Moments-In Time Recovery Clock assembly & Coin Insert Instructions.



Before assembling your clock, insert your recovery coins (not included) into coin slots (Service is 12 o'clock position). Use double sided tape or glue (not included) to secure coins in slots. In the event that the coins are very tight in the slots, gently tap in the coins with a hammer placing the "Round Tuit" (J) over the coin.

(Fig 1.)

1. After removing package contents, place hanger (B), over clock motor (C) as shown. Insert stem into the back of the base (A) center. Triangle hanger cut out should be pointed to the top clock position.

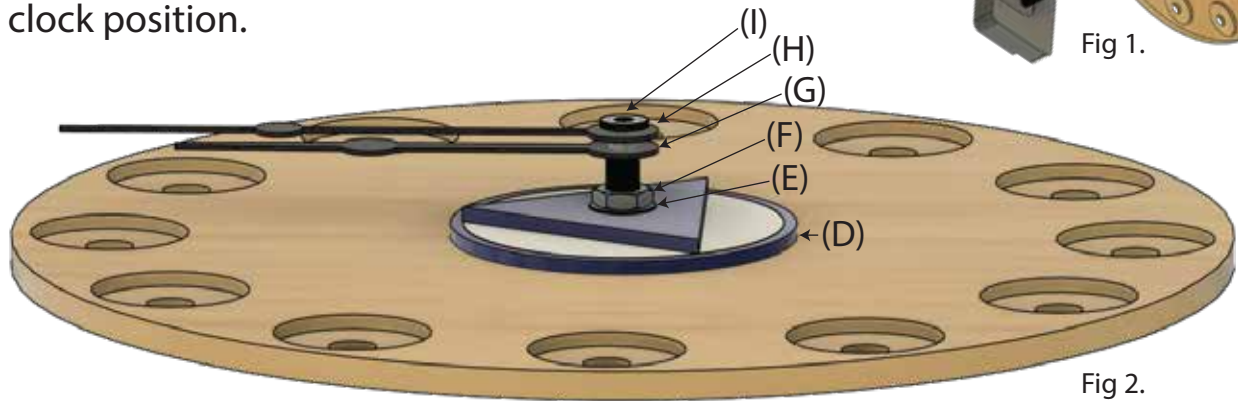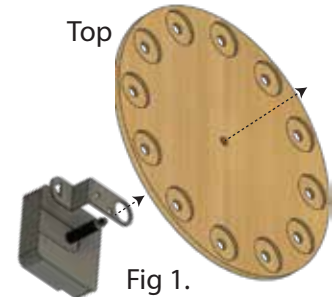

(Fig 2.)

2. Once the motor stem is fully inserted into the base, place acrylic center (D) over the stem, with the top triangle point to the 12 o'clock position. (Recovery should be at bottom).
3. Place washer (E) on stem, then fasten nut (F) until snug (DO NOT OVERTIGHTEN!).
4. Gently push hour hand (G) onto white area of motor stem.
5. Gently push minute hand (H) onto top of stem, with slots fitting on the threaded end.
6. Fasten knurled nut onto motor stem.
7. Insert AA battery (not included) into the back and hang your clock.

Congratulations on your recovery milestone and thank you for your support!

